

**\*** EN Only certain models.  
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR في موديلات معينة.	IT Solo per alcuni modelli.	RO Numai la anumite modele.
BG Само определени модели.	KK Тек белгілі бір модельдер.	RU Только в некоторых моделях.
CZ Pouze některé modely.	MK Само кај одредени модели.	SK Iba niektoré modely.
CN 僅限部分型號。	LT Tik tam tikri modeliai.	SL Samo nekateri modeli.
DA Kun visse modeller.	LV Vienīgi noteiktiem modeļiem.	SQ Vetëm disa modele të caktuara.
DE Nur bei bestimmten Modellen.	NL Alleen bepaalde modellen.	SR Samo neki modeli.
ES Sólo se aplica a determinados modelos.	NO Bare enkelte modeller.	SV Endast vissa modeller.
ET Ainult teatud mudelite.	PL Dotyczy tylko wybranych modeli.	UK Тільки в деяких моделях.
FA فقط بعضی از مدل ها.		
FI Vain tietyt mallit.		
FR Uniquement pour certains modèles.		
HR Samo na nekim modelima.		
HU Csak bizonyos modellek esetében.		

**1**





L  
?  
XXL

YouTube

Size: L/XXL

ART. NO. \_\_\_\_\_  
SERIAL NO. \_\_\_\_\_

**SAFETY**

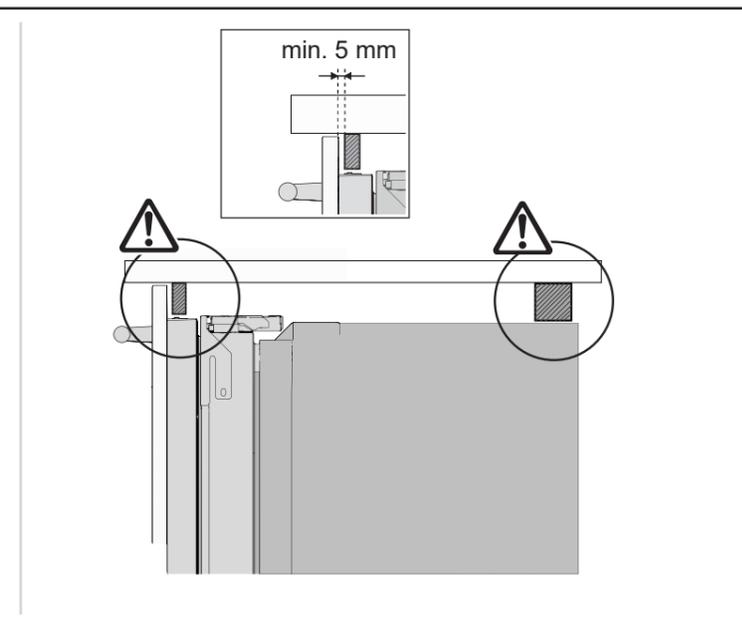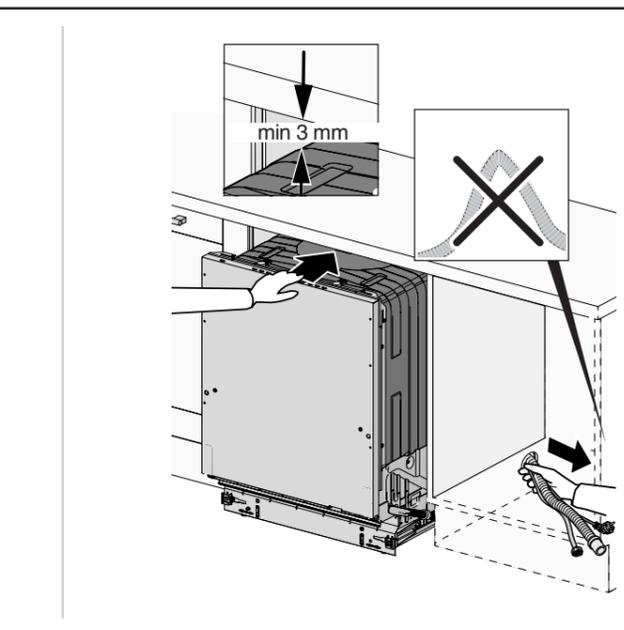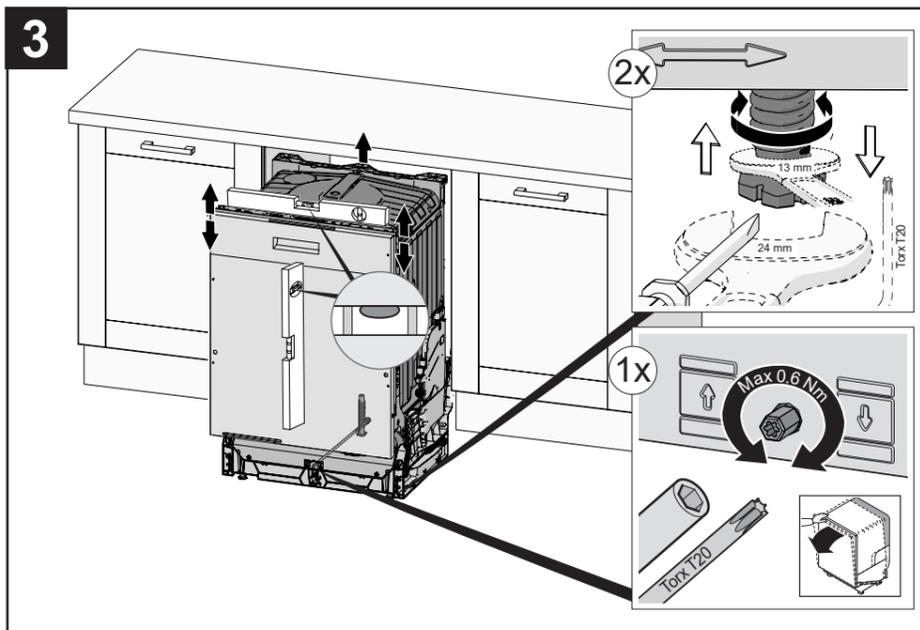
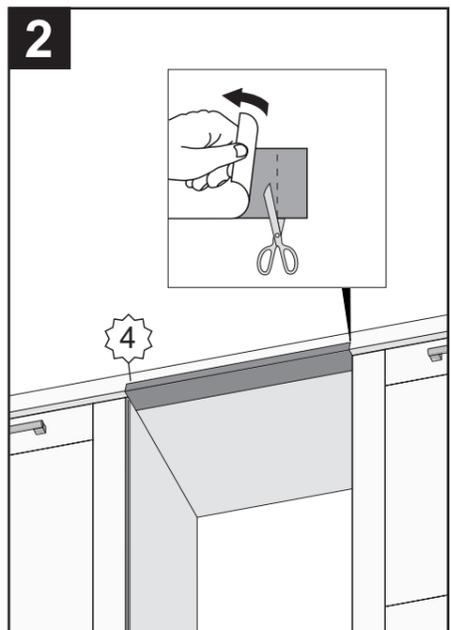


**4**

[mm]

L 640-720  
XXL 700-800  
XXL 720-800 FANDRY

kg L 3-10 kg  
XXL 3-9 kg

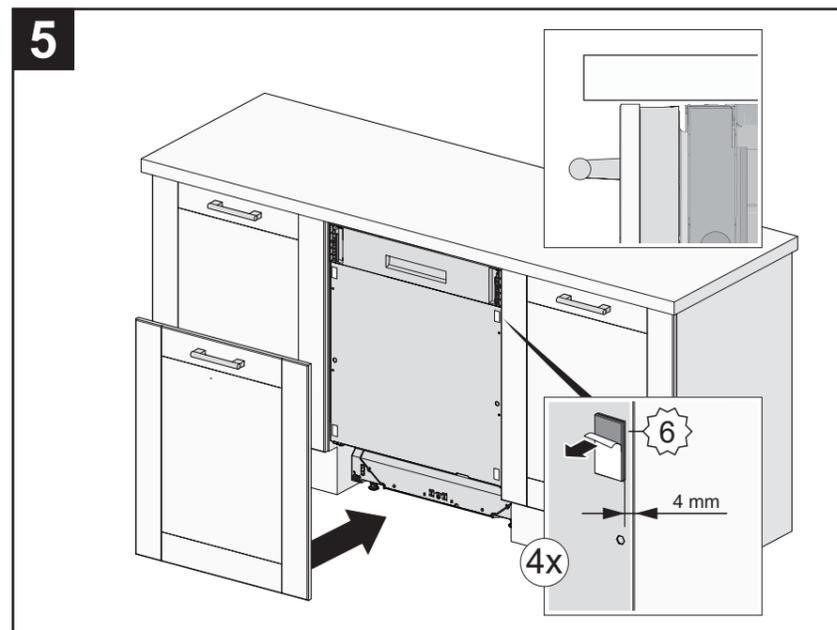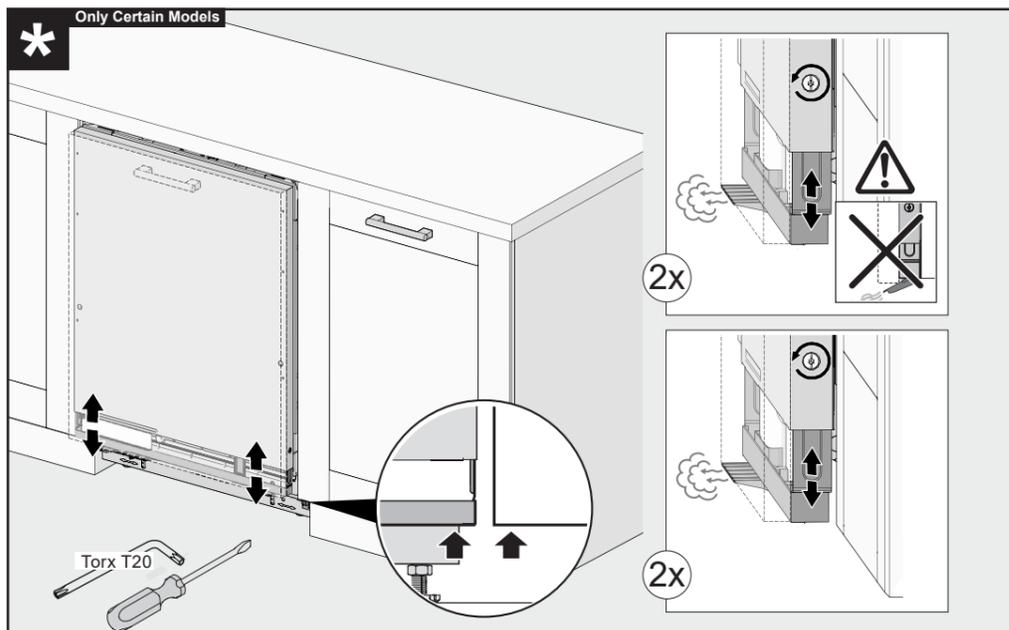

961889-03

We reserve the right to make changes.

