

INSTRUCTIONS FOR USE

Induction hob



We thank you for your trust and the purchase of our appliance.

This detailed instruction manual is supplied to make the use of this product easier. The instructions should allow you to learn about your new appliance as quickly as possible.

Make sure you have received an undamaged appliance. If you do find transport damage, please contact the seller from which you purchased the appliance, or the regional warehouse from which it was supplied. The telephone number can be found on the invoice or on the delivery note.

Instructions for installation and connection are supplied on a separate sheet.

Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.



For more detailed instructions and tips scan the QR code on the rating plate.

The following symbols are used throughout the manual and they have the following meanings:

 **INFORMATION!**
Information, advice, tip, or recommendation

 **WARNING!**
Warning – general danger

1. Safety precautions

IMPORTANT SAFETY PRECAUTIONS – CAREFULLY READ THE INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

Do not use steam cleaners or high-pressure cleaners to clean the appliance, as this may result in an electric shock.

The appliance is not intended to be controlled by external timers or separate remote control system.

Appliance must be connected to fixed wiring which has incorporated means of disconnection. Fixed wiring must be made in accordance with the wiring rules.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard (only for appliances supplied with connection cord).

WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. Switch off all cooking zones using their respective controls and remove the fuse or trip the main circuit breaker so that the appliance is fully isolated from the power mains.

WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire proof blanket.

WARNING: Danger of fire: do not store items on the cooking surfaces.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

CAUTION: This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.

WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

Metalic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

After use, switch off the hob element by its control and do not rely on the pan detector.

The appliance may only be connected to the power mains by an authorized service technician or expert. Tampering with the appliance or nonprofessional repair thereof may result in risk of severe injury or damage to the product.

2. Other important safety warnings

The appliance is intended for household use. Do not use it for any other purpose, such as room heating, drying of pets or other animals, paper, fabrics, herbs etc. As this may lead to injury or fire hazard.

The appliance may only be connected to the power mains by an authorized service technician or expert. Tampering with the appliance or nonprofessional repair thereof may result in risk of severe injury or damage to the product.

If another electrical appliance is connected to an AC power socket near the appliance, make sure the power cord does not come in to contact with hot cooking zones.

If the power cord is damaged, it should be replaced by the manufacturer or an authorised service technician, in order to avoid hazard.

Using the glass ceramic hob as a storage area may result in scratches or other damage to it. Never heat food in aluminium foil or in plastic containers on the cooking hob. Such foil or containers may melt which can result in a fire or damage to the cooking hob.

Do not store temperature-sensitive items underneath the appliance, such as cleaners or detergents, spray cans etc.

Eventual mismatches in colour shades between different appliances or components within a single design line may occur due to various factors, such as different angles under which the appliances are observed, different coloured backgrounds, materials, and room illumination.

2.1 Before connecting the appliance




WARNING!

Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.

3. Induction hob installation

Installation dimensions

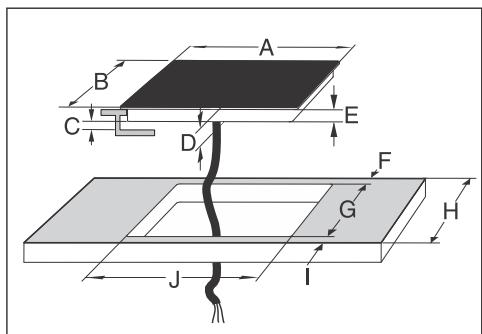


	A	B	C	D	E	F	G	H	I	J
60 cm	595	520	min.10	54	50	min.40	490-492	min.600	min.50	560-562
80 cm	795	520	min.10	54	50	min.40	490-492	min.600	min.50	760-762

- - INFORMATION!

Installation and connection of the appliance to the power mains may only be carried out by a qualified technician.

Installation procedure

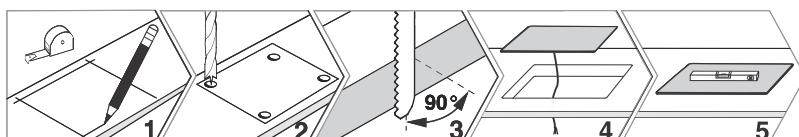


- Suitably protect the edges of the cut aperture.
- Connect the induction cooking hob to the mains power supply (see instructions for the connection of the induction cooking hob to mains power supply).
- Place the induction hob into the cut aperture.
- Veneer or other finish of the piece of kitchen furniture into which the hob is to be built in should be treated with heat resistant glue (100 °C); otherwise, the worktop finish may be discolored or deformed.
- Use of solid wood corner trims on worktops behind the induction cooking hob is only allowed if the clearance between the trim and the hob is no smaller than indicated on the installation plans.

- - INFORMATION!

The worktop has to be completely level.


 **INFORMATION!**

The appliance already has a pre-installed gasket.

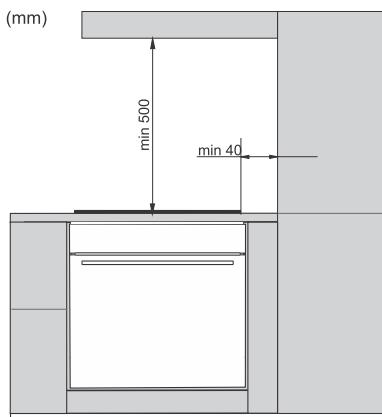


- The induction hob is suitable for installation into a worktop above a kitchen cabinet with a minimum width of 600 mm.
- Any kitchen cabinetry suspended above the induction hob should be high enough not to disturb the work process.
- The vertical distance between the induction hob and the kitchen hood must be at least the distance specified in the instructions for installation of the kitchen hood and no less than 500 mm.
- The distance between the edge of the induction hob and the adjacent kitchen cabinet should be no less than 40 mm.
- Minimum clearance between the induction hob and the rear wall is indicated in the installation diagram.

Lower cabinet with a drawer

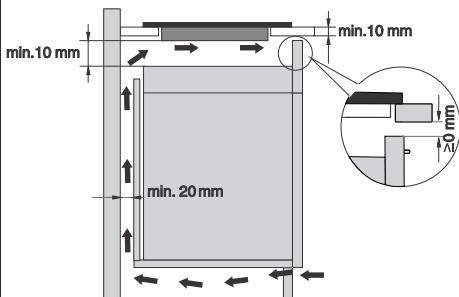

- There must be an opening with a height of no less than 140 mm along the entire width of the cabinet in the cabinet rear wall.
- Adequate ventilation should be allowed.
- There must be a drawer under the kitchen cabinet. Do not store aluminium foil, flammable substances or liquids (such as sprays) in it. Keep such substances away from the cooking hob. Danger of explosion! It should also not be used to store small objects and paper, as they may be sucked in.

Lower cabinet with an oven

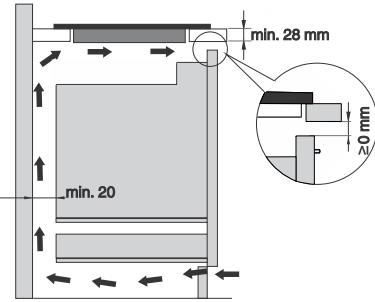	<ul style="list-style-type: none"> • Installing an oven under the induction hob is possible for oven models with a cooling fan. • Before installing the oven, the kitchen cabinet rear wall has to be removed in the area of the opening for installation. • If other appliances are installed under the induction cooking hob we cannot guarantee their correct operation.
---	--

- INFORMATION!


Normal operation of the induction cooking hob electronic components requires sufficient air circulation.

- INFORMATION!


The recommended height of the front ventilation slot is 4 mm.

3.1 Flush-mount installation into the worktop

Installation dimensions

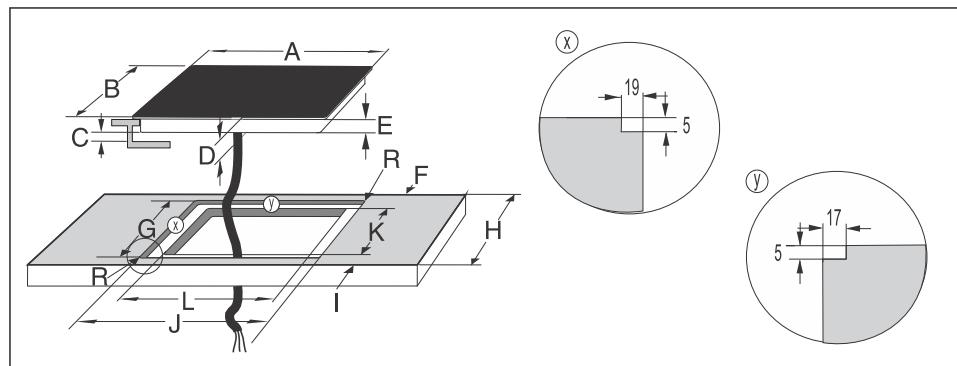

	A	B	C	D	E	F	G	H	I	J	K	L
60 cm	595	520	min.10	54	50	min.40	524-525	min.600	min.50	599-600	490-492	560-562
80 cm	795	520	min.10	54	50	min.40	524-525	min.600	min.50	799-800	490-492	760-762

 

Appliances without faceted edges or decorative frames, are suitable for flush mounting.

GLASS	CUT-OUT

Installation procedure

- The appliance may only be installed into a temperature- and water-resistant countertop, such as a countertop made of natural stone (marble, granite) or solid wood (the edges along the cut-out have to be sealed).
- When installing into a countertop made of ceramics, wood, or glass, a wooden sub-frame should be used. The frame is not supplied with the appliance. The appliance may only be installed into a countertop made of other materials after you have consulted the countertop manufacturer and obtained his express approval.
- Internal dimension of the basic unit should be at least equal to the internal cut-out for the appliance. This will allow simple removal of the appliance from the countertop.

	<ol style="list-style-type: none"> First, feed the power cord through the cut-out. Place the appliance over the centre of the cut-out. Connect the appliance to the power mains. Test appliance operation. Seal the slot between the appliance and the countertop using a silicone sealant. The silicone sealant used to seal the appliance has to be temperature-resistant (to at least 160 °C). Smooth out the silicone sealant using a suitable tool. Do not switch on the appliance until the silicone sealant has dried completely.
--	--


<ol style="list-style-type: none"> Silicone sealant Sealing tape 	

Stone countertop



WARNING!


Pay particular attention to built-in dimensions with (natural) stone countertops. When choosing the silicone sealant, observe the countertop material and consult the countertop manufacturer. Use of inappropriate silicone sealants can result in permanent discolouration of some parts.

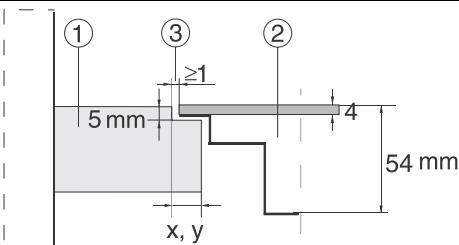

- 1. Countertop
- 2. Appliance
- 3. Slot

Given the margin of error (tolerance) for the glass ceramic plate of the appliance, and the cut out in the countertop, the slot is adjustable (min.2 mm).

Ceramic, wooden, or glass countertop

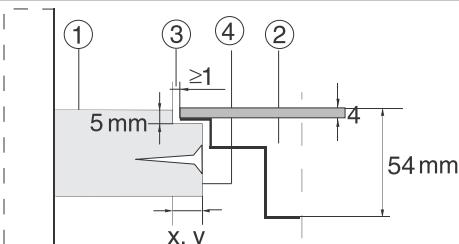

1. Countertop
2. Appliance
3. Slot
4. Wooden frame, thickness 16 mm.

Given the margin of error (tolerance) for the induction hob and the cut-out in the countertop, the slot is adjustable (min. 2 mm).

Install the wooden frame 5 mm below the upper edge of the countertop (see Figure).

Removing the built-in appliance

Disconnect the induction hob from the power mains. Use a suitable tool to remove the silicone gasket from the perimeter. Remove the induction hob by pressing from the lower side upwards.



WARNING!

WARNING: Do not attempt to remove the appliance from the upper side of countertop.



WARNING!

WARNING:
The service department shall only be responsible for repair and servicing of the induction hob.
Consult your specialized kitchen equipment dealer regarding the re-installation of the
flush mount induction hob.

**WARNING!**

If the oven is installed under a flush-mounted cooking hob, then the worktop thickness should be at least 40 mm.

4. Connecting the induction hob to the power mains

- Power mains protection must conform to the relevant regulations.
- Before connecting the appliance, make sure the voltage specified on the rating plate conforms to the voltage of the power mains.
- There should be a switching device in the electrical installation that can disconnect all poles of the appliance from the power mains, with a minimum clearance of 3 mm between the contacts when open. Suitable devices include fuses, protective switches etc.
- The connection should be adjusted to the current and fuses.
- After installation, the parts carrying electrical current and insulated parts shall be protected against contact.



WARNING!

The appliance may only be connected by an authorised expert. Incorrect connection may damage parts of the appliance. In such case, there is no right to warranty! Disconnect the appliance from the power mains before any repair or maintenance operation.



WARNING!

The appliance can be connected to the power mains when the temperature of the appliance is that of room temperature.

4.1 Power cord

(appliance without a power cord)



* Ferrules are not supplied.




INFORMATION!


We recommend using electric wire ferrules (end terminals).

- The following may be used for connection:
- PVC insulated connection cables type H05 VV-F with yellow-green protective conductor, or other equivalent or superior cables.
- Exterior cable diameter should be at least 8.00 mm.
- Run the power cord through a cord strain relief (clamp) that protects the cable from being pulled out.

4.2 Connecting the appliance

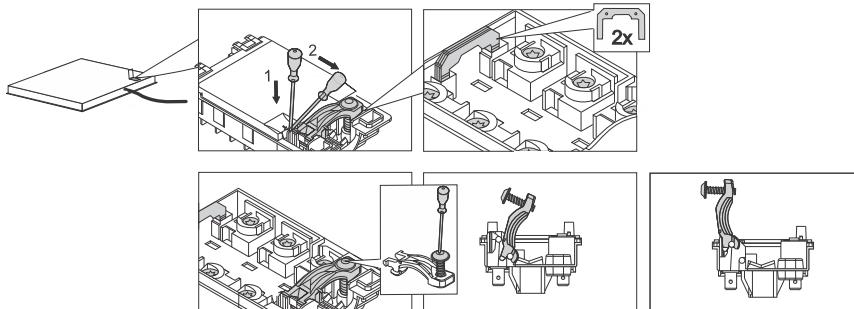




1. Open the cover of the connection terminal box.
2. Connect everything according to your type of appliance. The jumpers are provided on the connection terminal.
3. Run the power cord through a cord strain relief (clamp) that protects the cable from being pulled out.
4. For smaller diameter cables, remove the cord strain relief from the terminal and place it at a lower position as shown in the figure below.

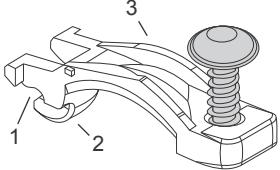Terminal	
	<ol style="list-style-type: none"> 1. Higher position (cables of larger diameters) 2. Lower position (cables of smaller diameters) 3. Cord strain relief

To remove the cord strain relief from a higher position, unscrew it first with a screwdriver, place it in a vertical position and pull it out of the bracket with some force in the direction of the arrow.

To attach the cable holder to a lower position, first place it in a vertical position, then attach it to the bracket using vertical force.




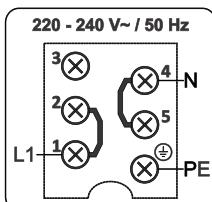
Connection diagram	Single phase connection (up to 32 A)
	<p>Single phase connection (up to 32 A)</p> <ul style="list-style-type: none"> • Single-phase connection (1 1N, 220-240 V~/50 Hz): <ul style="list-style-type: none"> - Voltage between line and neutral conductor is 220–240 V~. Install a jumper between terminals 1 and 2, and between terminals 4 and 5. - The circuit should be fitted with a fuse of up to 32 A. Power cord core cross-sectional area should be at least 4 mm². - If fuse is lower than 32 A, max current can be reduced in user settings (see chapter Maximum power setting - "Power management").

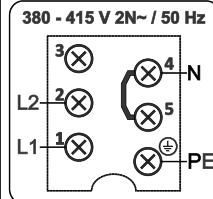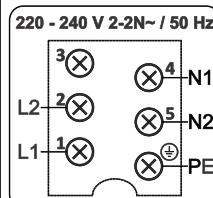Connection diagram	
 <p>380 - 415 V 2N~ / 50 Hz</p> <p>3 4 L2 5 L1 1 PE</p>	<p>2-phase connection (16A)</p> <ul style="list-style-type: none"> 2 phases, 1 neutral conductor (2 1N, 380–415 V~ /50 Hz): <ul style="list-style-type: none"> Voltage between the line and neutral conductor is 220–240 V~; voltage between lines is 380–415 V~. Install a jumper between the terminals 4 and 5. The circuit should be fitted with at least two fuses of at least 16 A each. Power cord core cross-sectional area should be at least 1.5 mm².
 <p>220 - 240 V 2-2N~ / 50 Hz</p> <p>3 4 L2 5 L1 1 N1 N2 PE</p>	<p>2-phase connection with two neutral conductors (16A)</p> <ul style="list-style-type: none"> 2 phases, 2 neutral conductors (2 2N, 220–240 V 2 2N ~ /50 Hz): <ul style="list-style-type: none"> Voltage between phases and neutral conductor is 220–240 V~. The circuit should be fitted with at least two fuses of at least 16 A each. Power cord core cross-sectional area should be at least 1.5 mm².

Connecting the power cord to the power mains

(appliance with a power cord)

- The cooking hob has to be hard-wired directly to the power mains.
- Devices for disconnecting from the power mains have to comply with the relevant regulations.
- Do not extend the power cord and do not lead it over sharp edges.
- If the appliance is installed above an oven, make sure the power cord is never in contact with the oven's hot parts.

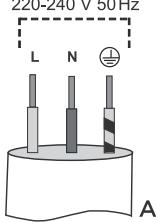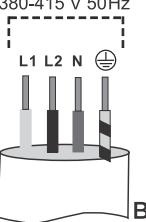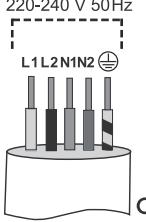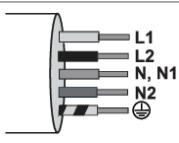Single-phase connection	Two-phase connection		
<p>1x < 32A 220-240 V 50Hz</p>  <p>A</p>	<p>2N 2 x 16 A 380-415 V 50Hz</p>  <p>B</p>	<p>2 2N 2 x 16 A 220-240 V 50Hz</p>  <p>C</p>	<p>L, L1 = brown L2 = black N, N1 = grey PE = yellow and green</p> 

Single-phase connection	Two-phase connection	
If your electric mains have 1 phase and 1 neutral conductor, connect the appliance as shown in Figure A.	If your electric mains have 2 line conductors and 1 neutral conductor, connect the appliance as shown in Diagram B.	If your electric mains have 2 line conductors and 2 neutral conductors, connect the appliance as shown in Diagram C.

Maximum power setting - "Power management"



After connecting the appliance to the mains, switch on the appliance by pressing the key and then pressing the key for three seconds. When holding down the key, a short beep is emitted twice. The following menu opens . By pressing the key, you enter the additional menu, where you can choose the maximum power of the appliance using the or keys. The first number represents the number of connection phases, and the second and third numbers represent the value of the current per phase. To save the settings, press and hold the key for 3 seconds or press the key, if you do not want to save the settings. Two minutes after connecting the appliance to the mains, the power settings can no longer be changed.

INFORMATION!


If the cooking zone power settings exceed the maximum allowed power, the user interface automatically lowers the power to the maximum allowed power.

Number of phases	Current [A]	Total power [W]	Number and cross-section of power cable wires
1	32	7360	3 x 4.0 mm ²
1	16	3680	3 x 4.0 mm ²
1	13	2990	3 x 4.0 mm ²
1	12	2760	3 x 4.0 mm ²
1	10	2300	3 x 4.0 mm ²
2	16	7360	4 x 1.5 mm ² or 5 x 1.5 mm ² (only for NL)
2	13	5980	4 x 1.5 mm ²
2	12	5520	4 x 1.5 mm ²
2	10	4600	4 x 1.5 mm ²


INFORMATION!

The maximum allowed power depends on the model.

 5. Appliance description



INFORMATION!
Appliance functions and equipment depend on the model.

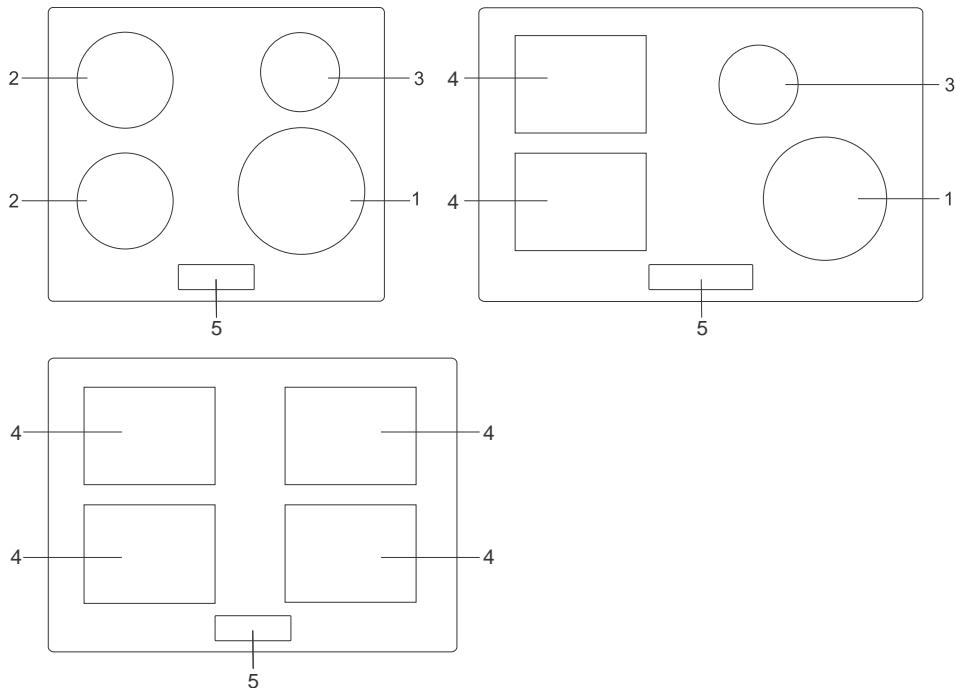

1. Induction cooking zone \varnothing 230 mm - 2300W - 3000W (boost)
2. Induction cooking zone \varnothing 180 mm - 1400W - 2100W (boost)
3. Induction cooking zone \varnothing 145 mm - 1200W - 1800W (boost)
4. Bridge induction cooking zone 210 x 180 mm - 2300W - 3000W (boost)
5. Cooking hob control module

5.1 Before first use

Clean the cooking surface using a damp cloth and some mild washing-up liquid.

During initial use, the characteristic "new appliance smell" may appear; it will gradually disappear.

6. Operating the cooking hob

6.1 Control unit

(depending on the model)

The appliance can have 3 or 4 sliders.



Key/Display	Description
	Switching the hob on/off The key can be used to turn the appliance on or off.
	Lock/child lock The appliance can be locked and unlocked to prevent it from being switched on unintentionally. Press and hold it for 3 seconds. The appliance is now locked.
	Time functions <ul style="list-style-type: none">countdown timer for the entire cooking hob; does not power off the cooking zone.
	<ul style="list-style-type: none">shut-off timer for respective cooking zones; when the time expires, the cooking zone is powered off.
	Timer related to the cooking zone To set the time, touch the partially illuminated clock icon. The icon will light up fully, allowing you to select the time. After 5 seconds, the time will start to count down automatically. The arrow above or below the clock lights up at the current or last selected cooking zone.
	Increase time settings <ul style="list-style-type: none">Touch the key to increase the timer or program timer settings by 1 minute.Long press to quickly increase the timer or program timer settings to the desired value.
	Decrease time settings <ul style="list-style-type: none">Touch the key to decrease the timer or program timer settings by 1 minute.Long press to quickly decrease the timer or program timer settings to the desired value.
	Fast Touch the key to increase the timer or programme timer settings by 10 minutes.
	Canceling or resetting settings Touch the key to stop the Timer operation and terminate the current settings.


Table continued from last page

Key/Display	Description
	User settings Touch the key for 3 seconds to turn on the user settings, where you can adjust the volume, brightness, automatic pan detection, child lock and alarm duration, pair the external hood (depending on the model), or restore the user settings to the factory settings. The  key is paired with  .
	The additional functions with automatic programs Touch the key to activate additional hob settings: melting, keeping warm, simmering, grill, fry and boil.
	Connection setup (Wi-Fi) (depending on the model) When the user interface is on and the cooking zones are off, hold down the key and release it when you want to enter the menu displayed on the timer.
	Pause With this function, you can pause the operation of the entire hob for up to 10 minutes. In the meantime, you can safely clean the hob without losing your settings. Press the key for a long time to turn off the cooking pause and turn it on again.
MELT	Melting/defrosting The function allows you to gently melt foods such as chocolate or butter. It also allows defrosting of frozen food.
WARM	Keep warm/reheat This function allows you to keep warm and reheat ready-made dishes.
SIMMER	Keeping warm just below boiling point/cooking with water The function allows heating the liquid just below the boiling point, where there is no rapid evaporation of water. Recommended for cooking dishes with a large amount of water, e.g. soups, stews.
GRILL	Grill cooking The function is intended for cooking dishes such as meat, vegetables or fish on a griddle plate or pan.
FRY	Frying The function is intended for cooking or frying food in a larger amount of oil for dishes such as potatoes, fish or dough.
BOIL	Bringing to the boil / boiling in water This function automatically brings water to the boil and then keeps it boiling.
	Bridge (depending on the model) Combine the cooking zones by pressing this key.
	Timer settings display Display the time settings.
0 1 2 3 4 5 6 7 8 9 P A	Slider Touch or slide the slider to set the cooking power or switch off the cooking zone.
0 1 2 3 4 5 6 7 8 9 P A	Cooking zone illumination When the function  is switched on and a pan is placed, the cooking area is partially illuminated. When a value is selected, it is fully illuminated.


Table continued from last page

Key/Display	Description
 	Hot zone indicator The cooking hob has an indicator light for each of the cooking zones, indicating that the cooking zone is still hot after switching off. Even if you switch off the hob, this indicator light will be on as long as the cooking zone is hot! Do not touch the cooking zone while this indicator light is on.

			
short press	long press	swipe	acoustic signal

 			
initial step	intermediate step	waiting/implementation	optional step

6.2 Switching the hob on/off

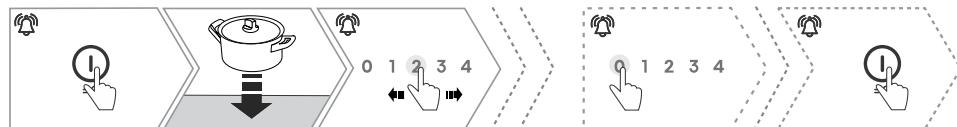

1. By pressing  you switch on the cooking hob.
2. On the slider indicating the cooking zones, 0 is partially illuminated. If the pan is already on the hob, 0 is fully illuminated and the rest of the slider is partially illuminated.
3. Place the cookware onto the selected cooking zone, and the corresponding 0 slider will light up fully.
4. Set the cooking power by touching the desired power level. A short beep will be emitted. The selected level is fully illuminated.
5. Switch off the hob by pressing the  key, to switch off the selected cooking zone touch 0 on the slider.


 **INFORMATION!**
If no cooking zone is switched on in 20 seconds, the induction hob will power off.

- **INFORMATION!**

The total power of the appliance is limited and also depends on the configuration of the cooking zones. In certain cases, you cannot set two or more cooking zones to the highest power simultaneously. This is especially noticeable if an additional power limit has been set on the appliance due to the household electrical installation.

6.3 Automatic pan detection


The hob has a preset automatic detection of the presence of cookware on the cooking zone.

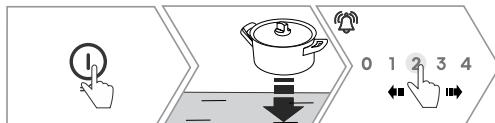

1. By pressing  you switch on the cooking hob.
2. Place the cookware onto the selected cooking zone, and the hob will automatically detect the presence of cookware A short audible signal will be emitted. The corresponding slider is partially illuminated.
3. Set any cooking level. When a value is selected, it is fully illuminated.

6.4 Pan movement detection

The hob automatically detects the presence of cookware on the cooking zone if the function is enabled. All power settings and time settings are transferred.

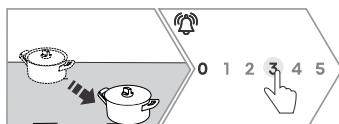

1. Transfer the cookware from one active cooking zone to another free cooking zone. The preset power level and the preset timer will start flashing on the new cooking zone.
2. Within 3 seconds, confirm the transfer of settings by pressing one of the levels on the slider. A short beep will be emitted.
3. If the transfer of settings is not confirmed after the time has elapsed or when pressing level 0 on a new cooking zone, the settings are not transferred.

- **INFORMATION!**

The pan movement function is not possible on a cooking zone with the automatic programs switched on.

6.5 Switching the cooking zone on/off



1. Touch or swipe the selected slider to select the desired power level.
2. A short beep sounds, the selected power is fully illuminated.
5. Switch off the hob by touching 0 on the slider or by pressing to switch off the hob.

6.6 High heating setting - "Power boost"

For quick cooking, the high heating setting can be additionally activated on the cooking zones. Thus, with the additional power of the cooking zones, you can quickly heat up even larger quantities of food. The additional operating power is activated for a maximum of 10 minutes and then automatically decreases to level 9. If the hob is not too hot, it can be reactivated.



1. Place the cookware onto the selected cooking zone.
2. Set the level with increased power.
3. To switch off the "Power boost" function, reduce the cooking zone power.

6.7 Automatic heating



By activating the function, the selected cooking zone will be heated for a while with high power, before it automatically switches to the set level. To turn on the function, select the power level and hold it for 3 seconds.

The automatic function can only be switched on if the cooking zone has been switched off.

1. To turn on the function, select the power level and hold it for 3 seconds.
2. There will be an acoustic signal.
3. By activating the function, the selected cooking zone heats up for a period of time at a higher power before it automatically switches to the set level.
4. To switch off the automatic heating, reduce the cooking zone power.

- INFORMATION!

If the power level is increased during the operation of the automatic function, the new set timer will include the time that has already elapsed at the previous selected level. If the elapsed time is longer than the time you want to reset, the automatic program will automatically end.

Power grade	1	2	3	4	5	6	7	8
Heating time [s]	40	70	120	180	260	430	120	195

- INFORMATION!

The automatic rapid heating function is suitable for dishes that have to be heated up at maximum power first, and then cooked for a longer period of time at a lower power level without the need for constant supervision.

The automatic rapid heating function is not suitable for braising, frying, or sautéing, food that requires frequent turning, basting, or mixing, or food that has to boil for a longer period of time in a pressure cooker.

6.8 Bridged cooking zone - "Bridge"

(depending on the model)

The cooking zones on the left or right side of the cooktop can be combined into one large connected zone. You can place an oval baking dish or grill plate on this zone.


- NOTE!

The pan must be large enough to cover the centres of the upper and lower cooking zones.

- The maximum size of the baking tray is 40 x 25 cm.
- For an even heat distribution, we recommend a baking tray with a thicker bottom.
- The baking tray gets very hot during cooking, so take care to protect against burns.
- When placing the baking tray on the hob, be careful not to cover the control module with it.

Cooking zones can be combined if:

- Both fields are inactive.
- One of the compatible zones is active – the set level of the connected cooking zone is transferred from the active zone.
- Both cooking zones are active – the set level of the connected cooking zone is transferred from the active zone that was operating at a lower level. If both cooking zones are set to the same level before combining, the same power is transferred.

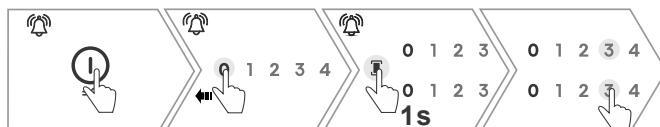

1. By pressing  you activate the function. A short audible signal will be emitted.

Table continued from last page

2. Set the cooking level on the lower or upper slider.
3. Switch off the function by pressing  or by touching 0 on the slider. A short audible signal will be emitted.
4. The timer switches off if you switch on the connecting zone "Bridge". It will be necessary to set the timer again.

6.9 Pause - "Stop&Go"

With this function, you can pause the operation of the entire hob during cooking.



1. By pressing for 1 second  you activate the function. A short beep sounds, the pause key flashes, and all set alerts are temporarily stopped. If a countdown timer (which is connected to the entire hob) is set, it will continue to operate.
2. All buttons are inactive except  and .
3. By pressing for 1 second  within 10 minutes you deactivate the function. The hob continues to operate with the same settings as before the function was activated.

INFORMATION!

If no key is pressed within 10 minutes, the hob will switch off automatically.

INFORMATION!

If the global timer is activated, it remains active after expiration in the Stop&Go mode and can be confirmed with any button.

6.10 Memory function - "Recall function"

In case of switching off the user interface, the function allows you to restore the cooking zone setting when switching on again.



1. Restart the user interface within 9 seconds of switching off the hob.
2. After power-up, the indicator  flashes for 7 seconds.

Table continued from last page

3. Within 7 seconds of switching on the appliance, activate the **II** key, to restore the settings set before switching off the hob. When the settings are restored, an acoustic signal will be emitted.
4. If the **II** key is not activated within a time interval of 7 seconds, or any other key is activated immediately after power on, the settings cannot be reversed.

6.11 Pan detection indicator



The appliance automatically detects a missing pan on an active cooking zone. In case of a missing pan, the entire slider with the set power will flash. During this time, the corresponding timers are temporarily paused on the cooking zone where no pans are present.

- INFORMATION!

If you do not put the cookware back on the cooking zone within 2 minutes, an acoustic signal will be emitted and the cooking zone will be switched off.

6.12 Hot cooking zone indicator

The hob is equipped with a hot cooking zone indicator.

The cooking zone heats up via residual heat emitted by the cookware. When you remove the cookware from the cooktop or turn off the cooking zone, the indicator light illuminates; during this time, you can use this heat to keep food warm or melt dishes.

- INFORMATION!

When goes out, the cooking zone can still be hot!

WARNING!

Be careful, there is a risk of burns!

6.13 Time functions

The appliance allows you to set a countdown timer that is connected to the entire cooking hob or to set the programme hours that are connected to each cooking zone.

Countdown timer for the entire cooking hob



The countdown timer can only be set with the user interface on. When the countdown timer is set, it will continue to count down the time even after the hob is switched off or during the active Stop&Go function.

INFORMATION!

After the time has elapsed, the countdown timer can also be confirmed when the hob is switched off or paused. Press any key to confirm.

Programme timer

After the set programme timer expires, the cooking zone that was connected to the timer will be switched off and an acoustic signal will be emitted. You can confirm the acoustic signal by pressing any key. The programme timer can only be set when the cooking zone is active.



Time function settings

1. By pressing / you turn on the time settings. The display starts flashing and shows the corresponding icon of the selected time function.
2. By pressing and you set the time in the range between 1 minute and 9 hours and 59 minutes.
By pressing you increase the desired time by 10 minutes.
3. The time function can be confirmed manually by pressing / or automatically after 7 seconds from the last change of the desired time.
4. After the timer has been successfully confirmed, an acoustic signal will be emitted and the corresponding icon for the timer function will be fully illuminated.
5. During the last minute of countdown, remaining time will be displayed in seconds.

-- INFORMATION!

When using two or more timer functions, the associated timer icon currently displayed on the screen is fully illuminated and has an arrow next to it. Other icons of the set timer functions are fully illuminated and do not have the arrow switched on. To display another set timer function, press the corresponding key.

Changing the time function

1. Make sure that the timer function to be adjusted is shown on the display. If it is not, do so by pressing the key belonging to the timer function. The arrow lights up to indicate the selected function.
2. Press the  /  key again, so that the timer display starts flashing.
3. Change the time function arbitrarily by pressing ,  or .
4. The time function can be confirmed manually by pressing  /  or automatically after 7 seconds from the last change of the desired time.

Switching off the time function

The time function can be terminated by simultaneously pressing ,  or  when it is shown on the display or if the time function to be interrupted is set to 0:00 and then confirmed (see changing the time function).

6.14 User settings

On the appliance, you can set: volume, brightness, automatic pan detection, child lock, alarm duration, external hood connection (depending on the model), factory reset.



1. Enter the parameter setting menu with a 3-second press on .
2. The display shows  and after 2 seconds it displays .
3. Use  and  to navigate the menu between the possible settings.
4. The available settings of the selected parameter are displayed as numbers on the front-right slider, which you can then select. The currently set value is fully illuminated.
5. Exit the user settings by pressing for 3 seconds the  key (the settings will be saved) or the  key (the settings will not be saved).

-- INFORMATION!

Entering the user settings is disabled if the active timer is connected to the entire cooking hob.

INFORMATION!

Entering the user settings is possible only for 5 seconds after the cooking hob had been switched on, when the settings key lights up.

Key/Display	Description
	Setting the power limit After connecting the appliance to the mains, activate the following key  . After 2 minutes, the power setting is no longer possible.
	Volume adjustment Use the slider to set the desired volume level from 0 to 3.
	Brightness setting Use the slider to set the desired level of illumination from 1 to 3.
	Automatic pan detection Use the slider to turn the function on 1 or off 0.
	Child lock setting Use the 0 or 1 setting to turn on or off the automatic locking of the appliance.
	Alarm duration setting Use the slider to set the alarm duration from 0 to 2. 0 = 5 seconds 1 = 1 minute 2 = 2 minutes
	Factory reset Long press on 1 to activate and return user settings to default values.
	Hood mode (depending on the model) The setting has a function only if the hob is connected to the cooker hood 1 = Manual mode 2 = Automatic mode (preset)
	Hood sensitivity (depending on the model) The setting has a function only if the hob is connected to the cooker hood Various profiles can be set that are related to the sensitivity of the hood in automatic operation mode 2 = Medium sensitivity 3 = High sensitivity

6.15 Child lock

The hob can be locked against unwanted switching on.

INFORMATION!

The hob must be switched off to activate the child lock.



1. Touch  and hold for 3 seconds.
2. Loc appears on the timer function display. A beep sounds, and the hob is now locked.
3. When the hob is locked, touch  and hold for 3 seconds. A beep sounds, and the hob is now unlocked.

6.16 The additional functions with automatic programs

The appliance provides six additional functions: reheating, melting, boiling, keeping warm below boiling point, grilling, and frying.

The additional functions allow automatic temperature control, without the need to adjust the heating level during cooking.



1. Pressing **A** opens the additional menu. The slider numbers on the selected cooking zone disappear and additional functions are displayed.
2. The additional function is activated by pressing the function you wish to activate. The additional menu closes when you press **A** again or automatically if you do not select a programme in 5 seconds.
3. When an audible signal is emitted, the additional function is activated. If you have selected the GRILL or FRY program, a set of additional temperature levels opens: 1, 2, 3, (4). By pressing the number, you select the desired temperature level. An audible signal sounds and the function is activated.
4. All additional functions except MELT consist of a preheating phase and a temperature maintenance phase. Until the ideal temperature is reached, the additional function icon will flash. When an audible signal is emitted, the preheating phase is complete and the program icon is fully illuminated.
5. The active function can be deactivated at any time by pressing the 0 value on the corresponding cooking zone.
6. After activating the additional function, the program timer can be set on the corresponding cooking zone. After the set program timer has elapsed, the additional function is switched off (see "Timer functions" to set it).

Table continued from last page

7. If you want to change the additional function after it has already been set, do so by pressing **A** . The menu with additional programs opens. Set the desired program again or close the menu.

Key/Display	Temperature	Description of the function
MELT		Melting/defrosting The function allows you to gently melt/defrost foods such as chocolate or butter. It also allows defrosting of frozen food.
WARM		Keep warm/reheat This function allows you to keep warm and reheat ready-made dishes.
SIMMER		Keeping warm just below boiling point/cooking with water The function allows heating the liquid just below boiling point, where there is no rapid evaporation of water. Recommended for cooking dishes with a large amount of water, e.g. soups and stews. When preheating is complete, the water has reached the temperature to maintain a gentle simmering. Recommended for cooking dishes with a water content of more than 500ml.
GRILL		Grill cooking Recommended for grilling meat, vegetables, fish and eggs. Used with oil quantities up to max. 150ml. Once preheating is complete, the pan has reached the ideal temperature and is ready to use. The additional function GRILL is not available to the small φ145mm cooking zone. Depending on the model, GRILL can also be used on connecting zones
FRY		Frying Recommended for frying potatoes, meat, fish, dough and vegetables. Used with oil quantities over 150ml. Once preheating is complete, the oil in the pan has reached the ideal temperature and is ready to use. The additional function FRY is not available on the small φ145mm cooking zone.
BOIL		Bringing to the boil / boiling in water This function automatically brings water to the boil and then keeps it simmering. When preheating is complete, the water has reached boiling temperature and is ready for use. Add food after preheating is complete. Recommended for cooking dishes with a water content of more than 500ml.

-- INFORMATION!

Using the ConnectLife app, in addition to other additional functions, the possibility of using more than 100 guided recipes and easy monitoring of the cooking status opens up. If any additional function is started via the ConnectLife app, the display of operation on the user interface is different from the above. The user manual is available in the ConnectLife app.

-- INFORMATION!

If the pan is removed from the cooking zone during an active additional function, the active function is paused. The selected additional function will flash together with the A icon. If you replace the pan within 20 seconds, the additional function will be resumed, otherwise it will be switched off.

-- INFORMATION!

The additional function continues to be active even if the pause – "Stop&Go" function is used for less than 20 seconds. It can also be restored with the memory function.

6.17 Maximum cooking time

For safety reasons, the cooking time for each cooking zone on the induction hob is restricted to a maximum duration.

Maximum cooking time depends on the most recently set power level. If the power level is not changed for a long time, the cooking zone will be switched off automatically after the maximum cooking duration is reached (see table below).

Cooking power level	A**	1	2	3	4	5	6	7	8	9	P*
Maximum operating time (h)	8	8	8	6	6	4	4	2	2	1,5	1,5

* After 10 minutes, the power level automatically decreases to 9; after 1.5 hours, the cooking zone is switched off.

** Automatic programs


6.18 Automatic overheat protection

The induction hob is fitted with a cooling fan that cools the electronic components during cooking. The fan may operate for a while even after the end of the cooking process.

The hob is also fitted with an overheating protector that protects the electronics from damage. The protector operates at several levels. When the cooking zone temperature gets very high, the cooking power is automatically reduced. If this does not suffice, the cooking zone power continues to decrease, or the safety mechanism switches off the cooking zone completely. When the induction hob cools down, its total power is available again.

6.19 Automatic switch off

If the keys are activated for too long during cooking (e.g., due to spilt liquid or an object placed over the sensor keys), all cooking zones will be switched off automatically after 10 seconds.

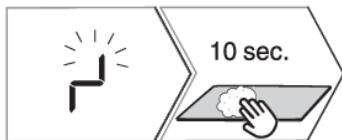

1. On the display flashes .
2. Remove the object or wipe spilt liquid from the sensor keys within 5 seconds to retain the power level settings. If you do not remove the object or wipe the spilt liquid within 10 seconds, the induction hob will be powered off automatically.

6.20 ConnectLife

Connecting the appliance to the ConnectLife application

ConnectLife is a smart home platform that connects people, devices and services. The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features may vary depending on your appliance and the region/country in which you are located).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone equipped with the application **ConnectLife**.

 **ConnectLife**



To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favourite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "Add device" menu and select the appropriate type of device. Then scan the QR code (it can be found on the nameplate of the appliance; you can also enter the AUID/MV number manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

6.21 Wi-Fi management

(depending on the model)

To enter the Wi-Fi module function settings, switch on the appliance and press .



	<p>Switching on the Wi-Fi module: 1. Press and hold the key between 1 and 4 seconds to activate the Wi-Fi module. The display will show "On". When you release the key, the Wi-Fi module is activated. After activation, the  symbol will flash.</p>
2.	<p>Connecting the appliance: With a long press of the key (between 4 and 7 seconds), "CSt" will appear on the display unit. By releasing the key, the connection is activated. A 5-minute timer appears on the display. During this time, scan the enclosed 3D code. NOTE: For further settings, follow the instructions in the ConnectLife app.</p>
3.	<p>Connecting additional users: To connect additional users, press and hold the key (between 7 and 10 seconds) until "PAr" appears on the display unit. By releasing the key, a 3-minute timer appears. During this time, additional users can be connected to the device using the ConnectLife app. After successfully establishing the connection, the Wi-Fi symbol  will stay on. NOTE: To continue the set-up, follow the instructions in the ConnectLife app.</p>
4.	<p>Removing all connected users: After long-pressing the key (between 10 and 13 seconds), "UPr" will appear on the display unit. When you release the key, the user settings icon flashes. By pressing this icon, you activate the remove function. When you enter the menu, a 1-minute timer is displayed, which is present until the connected users are removed from the device. Use this setting to remove all connected users from the ConnectLife app.</p>
5.	<p>Switching off the Wi-Fi module: After long-pressing the key (between 13 and 16 seconds), "OFF" will appear on the display unit. By releasing the key, the Wi-Fi module is switched off. After switching off the module, the symbol  goes out.</p>

6.22 Connecting an external hood - "Hob to Hood"

(depending on the model)

A connected appliance allows an external hood that is compatible with your appliance to be connected. Check with the manufacturer for compatible hoods.

Switch on the user interface and make sure that the cooking zones are not active.

1. Switch on the Wi-Fi module (see chapter 5.18 Wi-Fi operation)
2. Before using the Hob to Hood function for the first time, the hob must be updated using the ConnectLife app
3. To pair the devices, press and hold  (between 7 and 10 seconds) until "PAr" appears on the display unit. By releasing the key, a 3-minute timer appears. During this time, enable pairing on the other device (see the instructions of the external hood). The devices are automatically connected.
4. After successfully establishing the connection, the symbol  will stay on.

Table continued from last page

5. To disconnect the appliance from the hood, press and hold  until the "UPr" menu appears. When you release the key, the user settings icon flashes. By pressing this icon, you activate the remove function. When you enter the menu, a 1-minute timer is displayed, which is present until the connected users are removed from the device.

 **INFORMATION!**

With the "UPr" function, you will also remove other connected users at the same time as the hood.

7. Tips and hints

7.1 Cooking hob (conventional or glass ceramic)

- The hob is resistant to temperature changes.
- Using the cooking hob surface as a storage area may result in scratches or other damage to it.
- Do not use the glass ceramic hob if it is cracked or broken. If a sharp object falls on the hob, the hob may break. The consequences of such occurrence may be visible immediately or only after a while.
- If any visible crack appears in the hob, immediately cut off the power supply to the appliance.
- Make sure the cooking zone and the cookware bottom is clean and dry. This will allow better conduction of heat and prevent any damage to the heating surface.
- Do not place empty cookware on the cooking zone, as this may result in damage.




WARNING!

If sugar or food with high sugar content is spilled over a hot glass ceramic hob, immediately wipe the hob or remove the sugar with a scraper, even if the cooking zone is still hot. This will prevent any damage to the glass ceramic surface.

Do not use detergents and other cleaners to clean a hot glass ceramic hob as this could damage the surface.

7.2 Induction cooking zone operating principle

Cooking on an induction hob differs from cooking on traditional appliances. Induction hob uses magnetic field for generating heat and cooking. This means that not all types of cookware can be used on an induction hob.

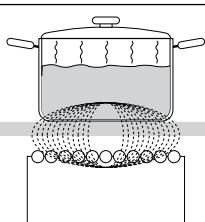



The cooking hob is fitted with highly efficient induction cooking zones. The heat is generated directly in the bottom of the pan where it is needed the most. This avoids any losses through the glass ceramic surface. Power consumption is considerably lower than in conventional cooking zones with radiation heaters.

The glass ceramic cooking zone is not heated directly, but only indirectly with the heat radiated back by the pan. After the cooking zone is switched off, this residual heat is indicated by .

In induction cooking zones, heating is made possible by the induction coil installed under the glass ceramic surface. The coil induces a magnetic field which generates eddy currents in the bottom of a ferromagnetic pan, which in turn heats the pan.

The induction will work correctly if you use suitable cookware.

7.3 Induction cookware


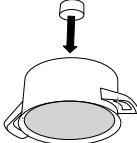
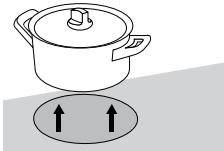
	<p>The magnet test: Use a small magnet to check whether the pan or pot bottom is ferromagnetic. If the magnet sticks to the bottom of the pan, then it is suitable for an induction cooker.</p>
	<p>Make sure the pot or pan is in the middle of the cooking zone</p>
	<p>For best cooking results, the ferromagnetic area on the cookware bottom should match the size of the cooking zone. If the cooking zone does not recognize the pan, try placing it on a different cooking zone with a smaller diameter.</p>

Suitable cookware	Unsuitable cookware
steel	glass
enamel-coated steel	alloy steel with copper bottom
cast iron	alloy steel with aluminium bottom

- When using a pressure cooker, keep an eye on it until the right pressure is reached. First, set the cooking zone to maximum power; then, following the pressure cooker manufacturer's instructions, decrease the cooking power when appropriate.
- Make sure there is enough liquid in the pressure cooker, or any other pot or pan. Due to overheating, using an empty pot on the cooking zone may result in damage to both the pot and the cooking zone.
- Some cookware does not have a fully ferromagnetic bottom. In such case, only the magnetic part will heat up, while the rest of the bottom will remain cool.
- When using special cookware, observe the manufacturer's instructions.

Cooking zone	Minimum pan bottom diameter
\varnothing 145 mm	\varnothing 90 mm
\varnothing 180 mm	\varnothing 110 mm
\varnothing 230 mm	\varnothing 110 mm
\varnothing 195 x 210 mm	\varnothing 110 mm

  Pan bottom has to be flat.

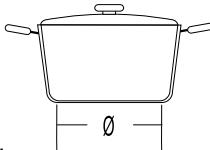

7.4 Energy saving tips

- When purchasing cookware, consider that the diameter indicated on the pan usually pertains to the upper edge or the lid, which is normally larger than the diameter of the pan bottom.
- If a dish takes a long time to cook, use a pressure cooker. Make sure there is always sufficient liquid in the pressure cooker. If an empty cooker is placed on the cooking hob, it may overheat which in turn may lead to damage to both the pot and the cooking zone.
- Whenever possible, cover the pot or pan with a suitably sized lid. Use cookware that fits the amount of food you are cooking. Cooking in a large partly full pot will consume much more energy.
- Even if there is no pot or pan on the cooking zone or if the pan used has a diameter that is smaller than the diameter of the cooking zone, there will be no losses of energy.
- If the pan is much smaller than the cooking zone, there is a possibility that it will not be detected.
- If a smaller pan or pot is placed on the cooking zone and it is recognized, the hob will only use as much power as necessary given the pan size.

8. Cleaning and maintenance

After each use, wait for the glass-ceramic surface to cool down and clean it. Otherwise, all remaining impurities will burn onto the hot surface the next time you use the hob.

For regular maintenance of the glass-ceramic hob, use special care products that create a protective film on the surface to prevent the dirt from sticking onto it.

Before each use of the glass-ceramic surface, wipe off the dust or any other impurities that could scratch the surface, from both the hob and the pan bottom.

INFORMATION!

Steel wool, coarse cleaning sponges, and abrasive powders may scratch the surface. The surface may also be damaged by aggressive spray cleaners and unsuitable liquid cleaners.

Signage may be worn when using aggressive or abrasive cleaners or cookware with coarse or damaged bottom.

Use a damp soft cloth to remove minor impurities. Then, wipe the surface dry.

Remove water stains with a mild vinegar solution, which should not be used to wipe the frame (in some models), as it could lose its shine. Do not use aggressive sprays or cleaners to remove limestone.

Remove heavy dirt with special cleaners for cleaning glass-ceramic surfaces. Follow the detergent manufacturer's instructions. Be careful to thoroughly remove cleaner residues after cleaning, as they may damage the glass-ceramic surface when heated up.

Remove stubborn and burnt dirt with a scraper. When using the scraper, be careful not to injure yourself.

Immediately remove any sugar or sugar-laden food from the glass-ceramic hob using a scraper, even if the hob is still hot, as sugar may permanently damage the glass-ceramic surface.

INFORMATION!

The scraper is not included in appliance equipment.



INFORMATION!

Only use the scraper when dirt cannot be removed with a wet cloth or special cleaners for glass-ceramic surfaces.

Hold the scraper at the correct angle (45° to 60°). Gently press the scraper against the glass and slide it over the signage to remove the dirt. Make sure the plastic handle of the scraper (in some models) does not come into contact with a hot cooking zone.

INFORMATION!

Do not press the scraper perpendicularly against the glass and do not scratch the hob surface with its tip or blade.

9. Problems and errors

During the warranty period, only a service centre authorised by the manufacturer may carry out any repairs.

Before making any repairs, make sure the appliance is disconnected from the power mains by disconnecting the fuse.

Do not perform any unauthorised repairs to the appliance, as this may result in electric shock and a short circuit hazard. Such work should be left to a professional or a service technician.

In case of minor issues with the operation of the appliance, refer to this manual to see if the problem can be fixed by yourself.

Keep this user manual for future reference and pass it on to any subsequent owners or users of the appliance.

Following is some advice on rectifying some common problems.

Problem/error	Cause of/rectifying a fault
The main fuse in your home trips often.	To troubleshoot the problem, check that you have the correct input current limit set in the user settings (parameter). In the event that the problem is still present, call a service technician. 
Audible signal and display 	Water spilt over the sensor surface, or an object placed over the sensors. Wipe the sensor surface.
Poor key responsiveness	Clean the operating area of the appliance and dry it completely. Remove any pans or plates. Allow the appliance to cool. Disconnect the appliance from the power mains for one minute (unscrew the fuse or switch off at the main power switch).
Hot	The user interface is too hot to operate. Please wait for the interface to cool down.
Err	Appliance could not connect to the ConnectLife app or disconnect from it. Try a factory reset.
E20, E47, E48	Internal fault in the electronics. Disconnect the appliance from the power mains for one minute (unscrew the fuse or switch off at the main power switch).
E42	Fault on the control interface. Clean the control interface area and allow it to dry. Disconnect the appliance from the power mains for one minute (unscrew the fuse or switch off at the main power switch).
E00, E01, E02, E03, E04, E05, E21	Check that the appliance is properly connected to the power mains and that all terminal contacts are properly screwed in. Check whether the connected voltage is suitable.
E18	Insufficient cooling of the appliance. Check that the appliance is installed according to the user manual.
E19	The cooking zone temperature is too high. Do not attempt to heat empty pans.

If, despite following the above tips, you are unable to remedy the interference, disconnect the appliance from the power mains for one minute (unscrew the fuse or switch off at the main power switch). If the error reappears, please call a service technician. Elimination of defects or complaints arising from improper connection or use of the appliance are not covered by the warranty. In this case, the repair costs will be borne by you.



WARNING!


Before repairs, disconnect the appliance from the power mains (by removing the fuse).

9.1 Noises during induction cooking

Noises and sounds	Cause	Solution
Induction generated operating noise	Induction technology is based on the properties of some metals under electromagnetic effect. It results in so-called eddy currents that force the molecules to oscillate. These oscillations (vibrations) are transformed into heat. Depending on the type of metal, this could result in quiet noises.	This is normal and it is not a result of any malfunction.
Transformer-like buzz	Occurs when cooking at a high power level. The reason for this is the amount of energy transferred from the cooking hob to the pot or pan.	This noise will disappear or weaken when you reduce the power level.
Vibration and crackling of the cookware	This noise appears in cookware (pots or pans) made of different materials.	It results from vibrations along the adjacent surfaces of different material layers. This noise depends on the cookware. It can vary depending on the amount and type of food being cooked.
Fan noise	Correct operation of induction electronic components requires temperature control. Therefore, the cooking hob is fitted with a fan that cools the electronics depending on the sensed temperature.	The fan may operate even after the cooking hob has been switched off, if the temperature remains too high.

10. Technical data

(depending on the model)

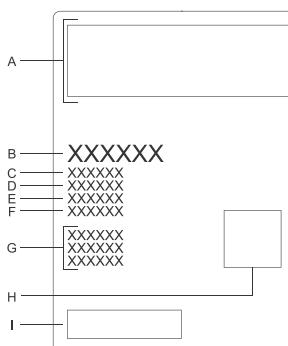

- A. Wiring diagram
- B. Trademark
- C. Model
- D. Type
- E. Code
- F. Serial number
- G. Technical data
- H. QR code
- I. Compliance labels

The rating plate with basic information on the appliance is located on the bottom side of the cooking hob. Information on appliance type and model can be found on the warranty sheet.

11. Disposal



Our product packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.

The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. Take the product to an authorized collection centre for waste electric and electronic equipment processing.

Correct **disposal** of the product will help prevent any negative effects on the environment and health of people, which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

We reserve the right to any changes and errors in the instructions for use.

12. Compliance information

Radio equipment type:	HLW3215-TG01 module
Wi-Fi indicator	
Operating frequency range:	2.4000 GHz - 2.4835 GHz
Maximum output power:	≤10 dBm/MHz (EIRP) (Antenna gain <10 dBi)
Maximum antenna gain:	Gain: 0 dBi
Bluetooth indicator	
Frequency range:	2.400 GHz - 2.4835 GHz
Carrier Output:	6 dBm (≤10 dBm)
Emission type:	F1D

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address <https://auid.connectlife.io> on the page of your device among the additional documents.

Hisense
life reimagined



941323-a14

CE